

SOLAR INVERTER SAFETY & OPERATION GUIDE

Important Instructions for System Longevity

1. General Safety

- **Do NOT touch** the inverter with wet hands.
- Keep the inverter area dry and well-ventilated.
- Keep children away from the inverter and DC distribution box.

2. Start-Up Procedure (Day Time)

1. Turn ON the **DC Switch** (PV Isolator).
2. Turn ON the **AC Breaker** (Distribution Board).
3. Wait for 60 seconds for the inverter to synchronize.
4. Check the display: "Normalization" or "Generating" LED should be green.

3. Shut-Down Procedure (Emergency/Maintenance)

1. Turn OFF the **AC Breaker** first.
2. Turn OFF the **DC Switch** provided on the inverter.
3. Wait for 5 minutes before touching any cables (Capacitor discharge time).

4. Error Codes

- **Red LED On:** Check Error Code on screen. Contact support immediately.
- **No Display:** Check if AC and DC Breakers are ON.

CONTACT US

Address: Near Gunjan Takies, Dibiyapur, Auraiya (U.P.) 226244

Helpline: +91-89794-97915 | Email: enterprisesjs.1986@gmail.com

